



Quick-Garden

# Whitefield

## Assembly instructions



<u>PRODUCT NAME</u>	CARPORT CLASSIC 3X6
<u>REFERENCE NUMBER</u>	

<i>Carport 3x 6</i>						
	Size, mm			Detail stock	Details	Annotation
	Length	Width	Table			
1	3470	520	44	4		Vaults
2	5950	130	44	2		Wall C D
3	5950	130	44	1		Rafters
4	5950	130	44	2		Rafters
5	2460	130	60	8		Support boards
6	600	130	44	16		Support boards
7	1950	110	20	110		Roof boards
8	2050	105	22	4		Wind boards
9	2075	105	22	4		Wind boards
10	2075	60	16	4		Wind boards borders
11	5950	105	22	2		Roof plank
12	5950	35	25	2		Roof plank borders

Screws			Nails		
	3.5x5	For windows and doors		2.5x6	For boards
	3.5x3	For roof decorative parts			

**IMPORTANT (Read carefully before starting)!**

- The following instructions include both pictures (indicating every part by the digits – see part list above) and illustrations. Please keep in mind that the illustrations are just a general guide to assembling all our products (For example: The illustration on how to assemble a roof applies to all our roofs). However specific models will vary in the quantity of materials needed. By closely consulting the part-list, you will know how many parts you need for each stage of the assembly, while the illustrations will show you how put them together.

- If some extra boards are left over after assembling your product, do not worry. We sometimes include extra boards to ensure that the delivery package is perfectly compact and solid.

**1. General instructions**

**Read carefully before starting.** First of all, we want to thank you for buying one of our products. Please read these instructions carefully before unpacking the parts.

**2. Storing your product prior to assembly.**

Your unpacked product must be stored in a dry, ventilated place, where it is protected from the weather (the package is not waterproof) and direct sunlight. The package and parts should be laid flat on the ground in order to avoid any damage to them. We strongly recommend assembling the product as soon as possible after it is delivered, because any complaints regarding missing or damaged parts can only be made up to 10 days after the date of delivery.

### **3. Safety.**

The wooden parts may cause splinters, so please handle them carefully and wear protective gloves. Make sure there are no protruding nails, screws or staples in the assembled pieces. Always follow the instructions carefully and keep to the order of steps.


### **4.Assembly.**


**Before starting to assemble your structure, we strongly recommend that you watch our video guide on our website [www.quick-garden.co.uk](http://www.quick-garden.co.uk) (under the category "Assembly").** During the installation process constantly check that everything is level and parallel. For all parts that need to be assembled using screws, it is advisable to pre-drill holes to avoid the risk of splitting the wood during screwing.

**4.1. Familiarize yourself with the parts.** All parts are numbered, so start by checking that all parts are present by matching them off against your instruction manual. We recommend you sort the parts into separate piles. You will need a rubber hammer, electric screw-driver and anchor screws.


**4.2. Foundation.** Before starting the installation, make sure that the building surface is perfectly flat and level. Lay the foundation elements (PVC blocks, concrete slabs, etc.).

**4.3. Walls:** Assemble this carport following the pictures and illustrations shown below:

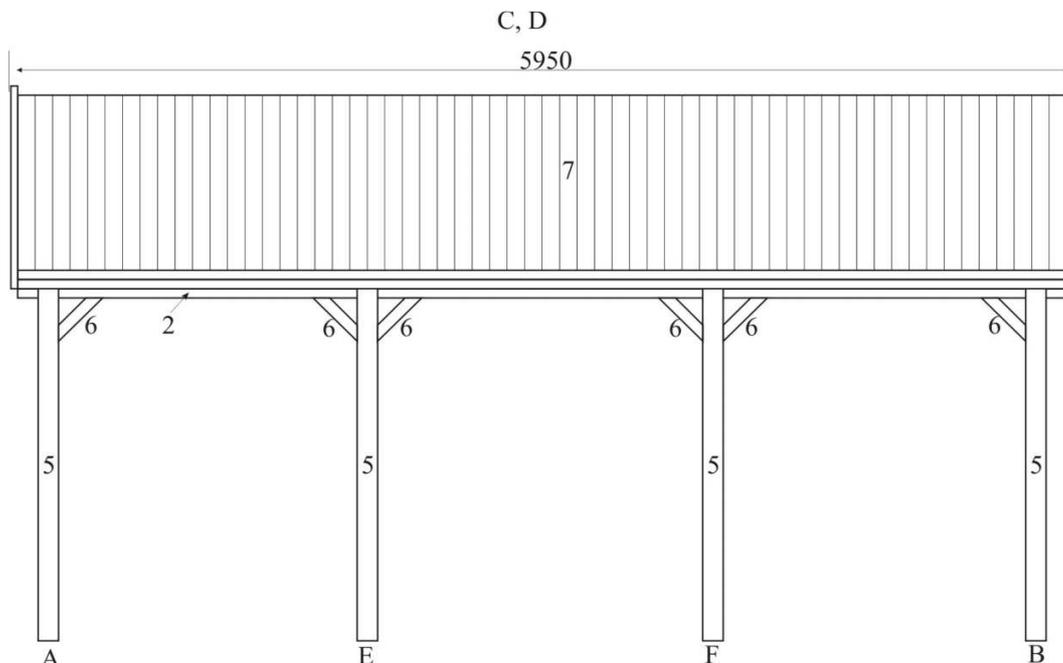


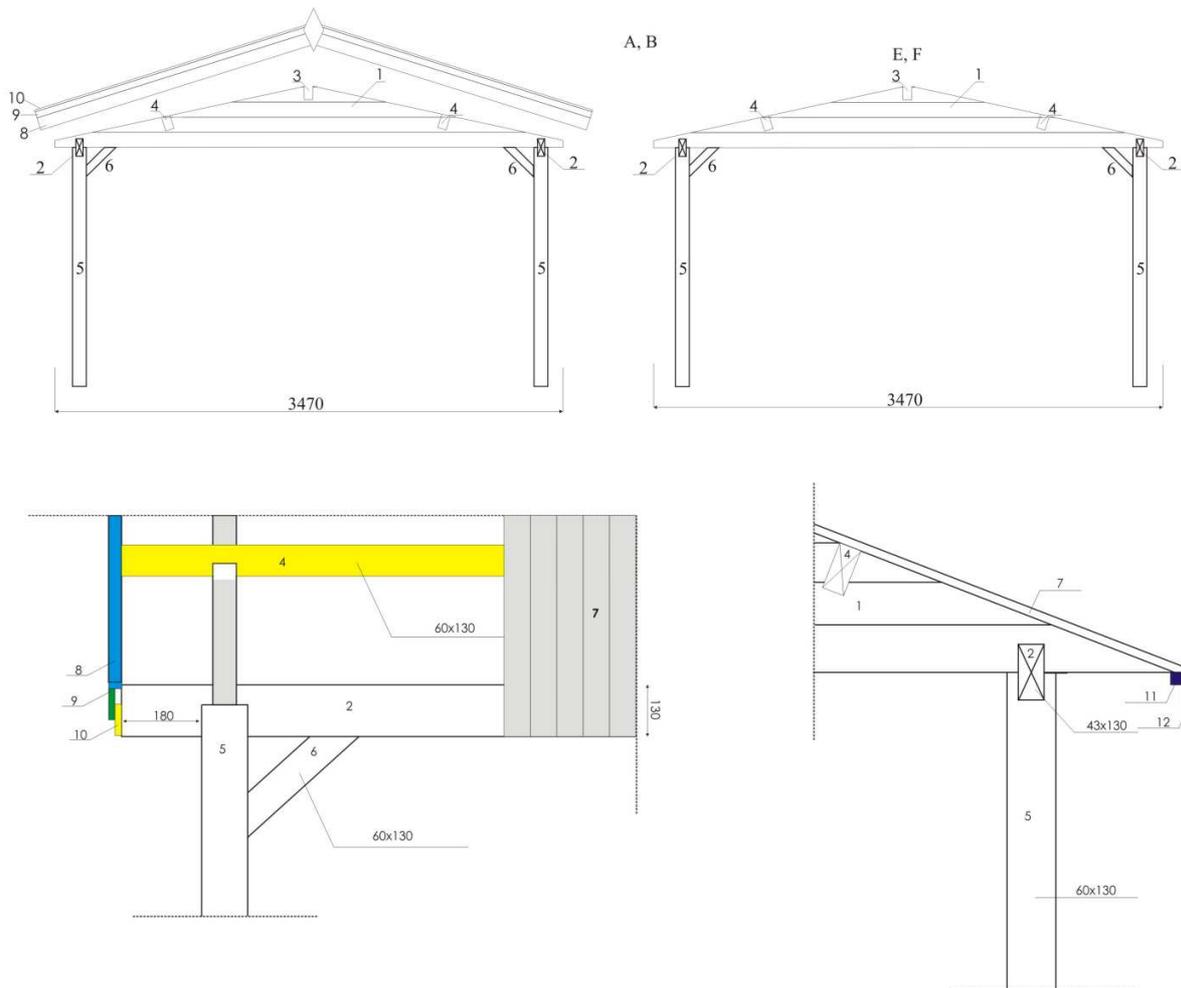


**4.4. Roof-boards:** Attach the roof-boards vertically and screw them into the rafters as shown in the page 3. Make sure the ends of the roof-boards are perfectly parallel to each other. Then fix the roof plank boarder under the roof-boards. The roof-plank must be screwed to the roof plank boarder.

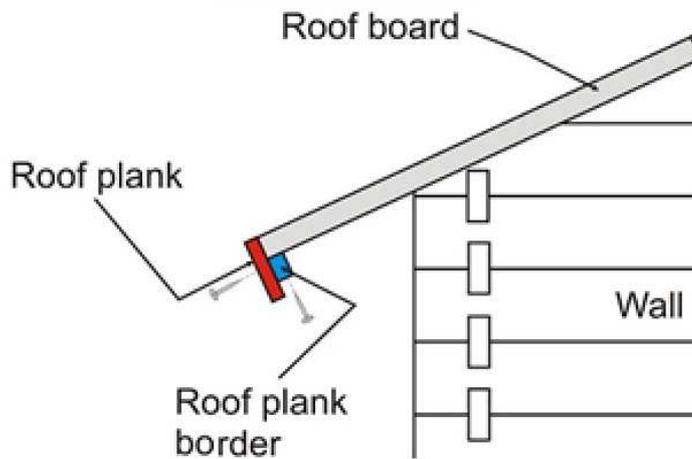

**4.5. Wind-boards:** Place the wind-boards on top of each other to make a 90 degree angle. Now attach these ones on a roof frame triangle and fix with screws.

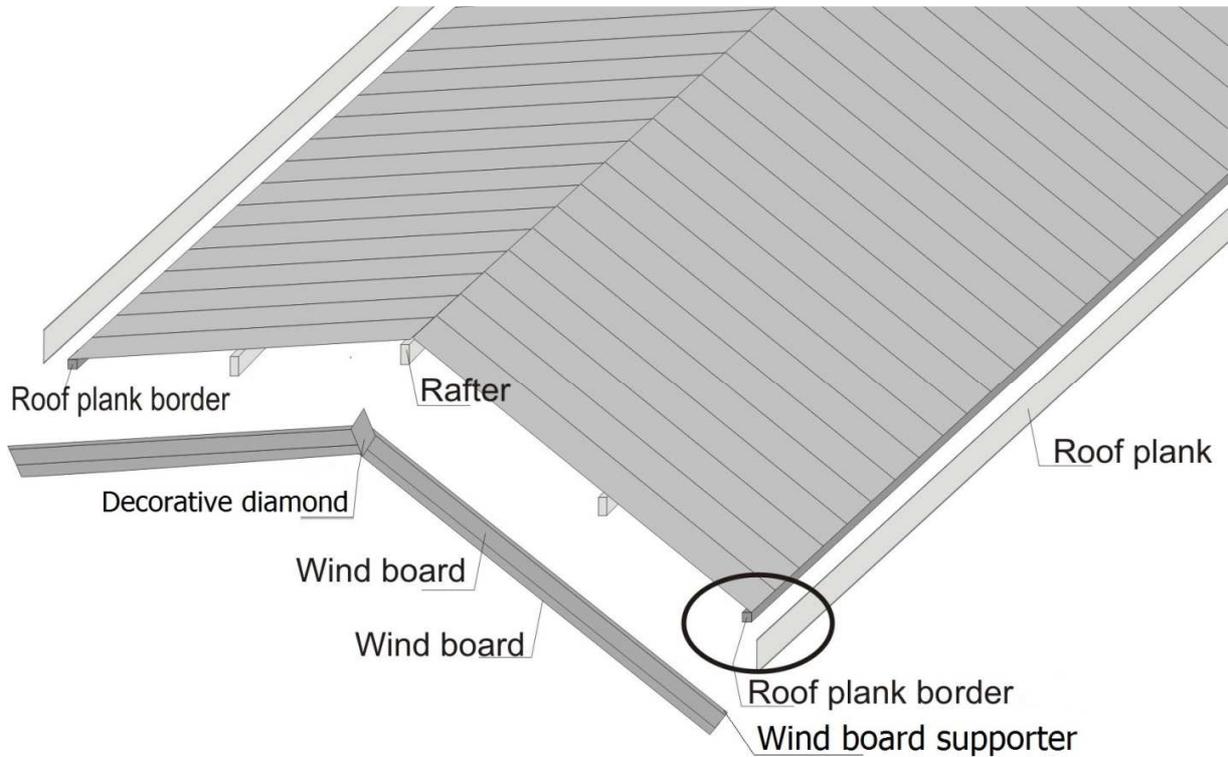

**4.6. Felt roof shingles:** When the whole structure is assembled and has been treated, attach the felt roof shingles to the roof-boards as shown in the picture. We recommend that you cover the roof only after the structure has been treated.

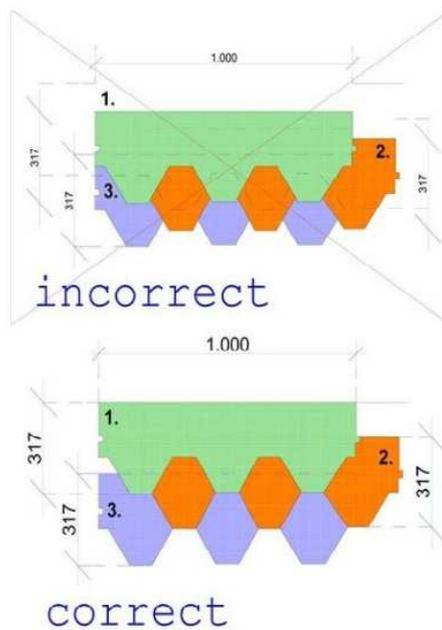

**Treatment.** It is important to treat the product using a quality wood-preservative instantly after the assembly process is finished. Apply at least 2 coats to the outside and 1 to the inside. Repeat annually.

**After-sale service.** Any missing parts or defects must be declared using the After Sales Service form (available in our web site [www.quick-garden.co.uk](http://www.quick-garden.co.uk) or in the last page of this instruction) within 10 days of the product being received. Our After Sales Service will replace defective or missing parts. Make sure you fill in the After-sales service form correctly. After-sale service line + 44 207 097 0013 or [clients@quick-garden.co.uk](mailto:clients@quick-garden.co.uk)

See the terms and conditions of Quick-Garden at [www.quick-garden.co.uk/general-conditions](http://www.quick-garden.co.uk/general-conditions)

Assembly notice – keep for later reference.

We hope you enjoy your purchase.

*Sincerely yours*

*Quick-Garden team*

